

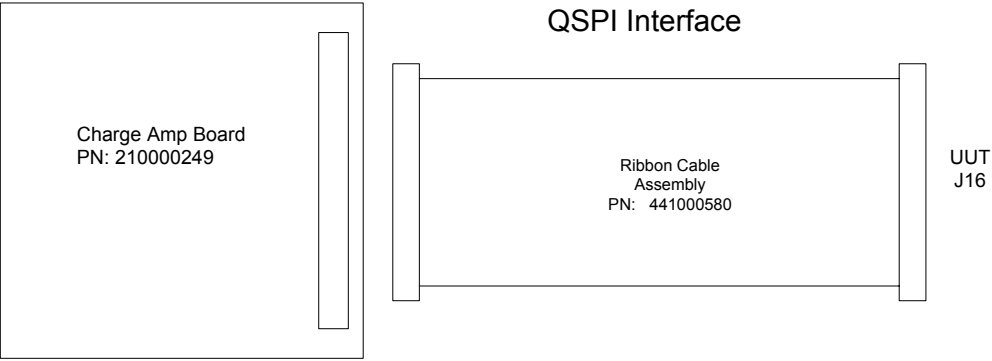


NOTE:
Jumper must be Installed for
the UUT to initialize properly.
Remove when finished
testing.

		TITLE 210000292 2998 DEBUG/TEST FIXTURE			
DRAWN BY: M Jussaume	SIZE B	FSCM NO TE829895	DWG NO UUT Cable Diagram		REV A
CHECKED:					
ISSUED:	SCALE 1 : 1			SHEET 1 OF 5	

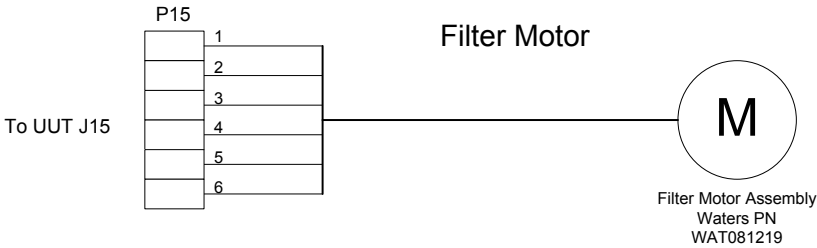


Power Cable

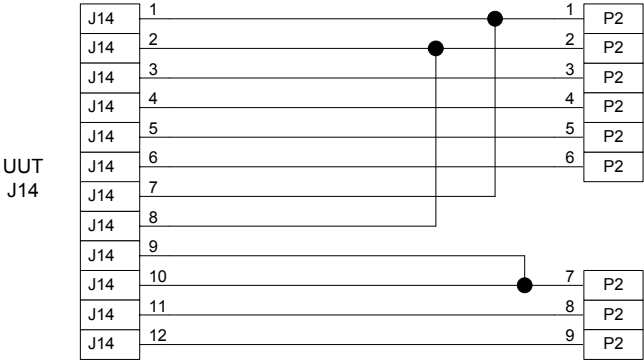


TITLE				210000292 2998 DEBUG/TEST	
				FIXTURE	
DRAWN BY:	M Jussaume	SIZE	B	FSCM NO	TE82895
CHECKED:		DWG NO			UUT Cable Diagram
ISSUED:		SCALE	1 : 1	REV	
				SHEET	2 OF 5



Status LEDs

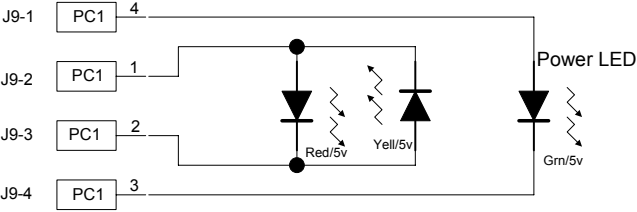

Leak Detector

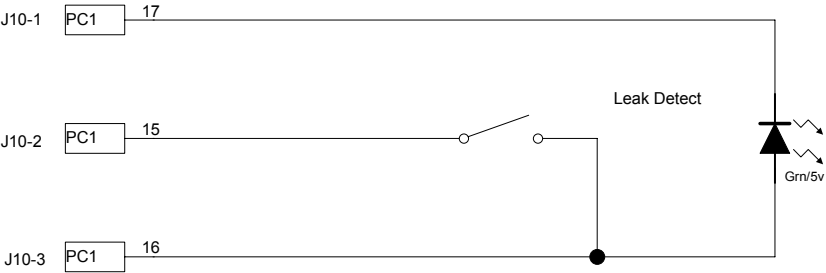


Lamp Control

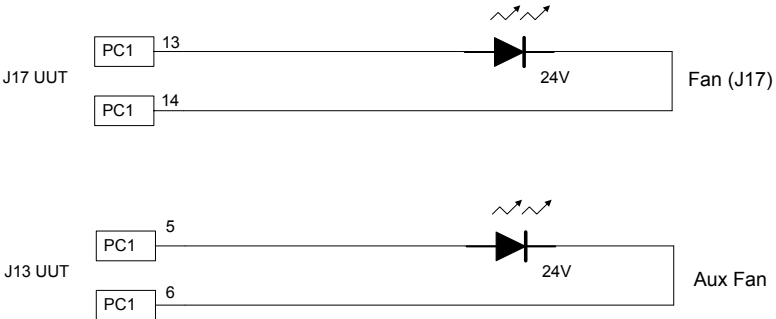
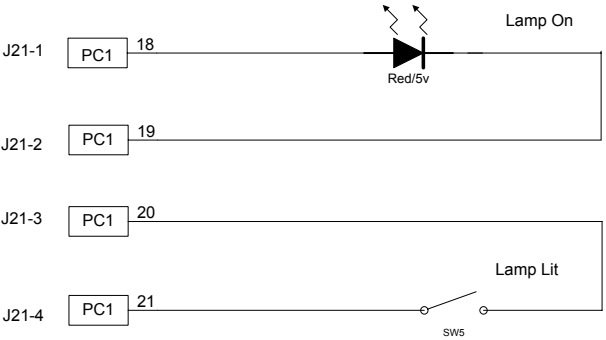


TITLE				
210000292 2998 DEBUG/TEST				
FIXTURE				
DRAWN BY:	M Jussaume	SIZE	FSCM NO	REV
CHECKED:		B	TE82895	A
ISSUED:		SCALE	1 : 1	
			SHEET	3 OF 5

Analog Output

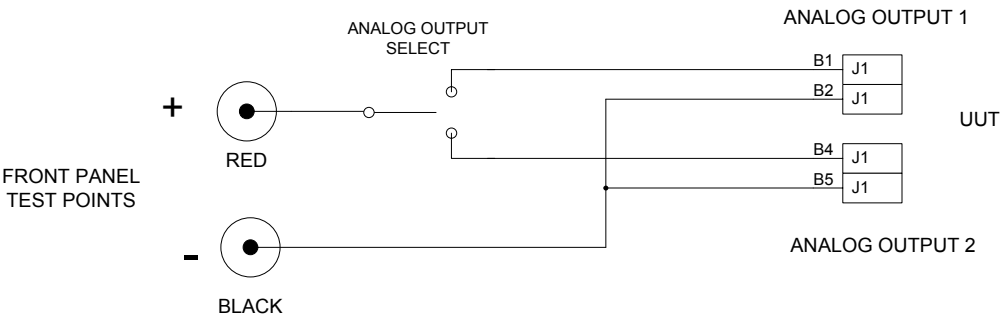

Event Inputs

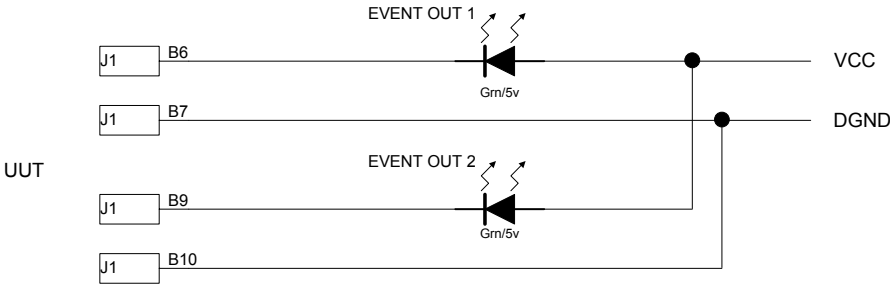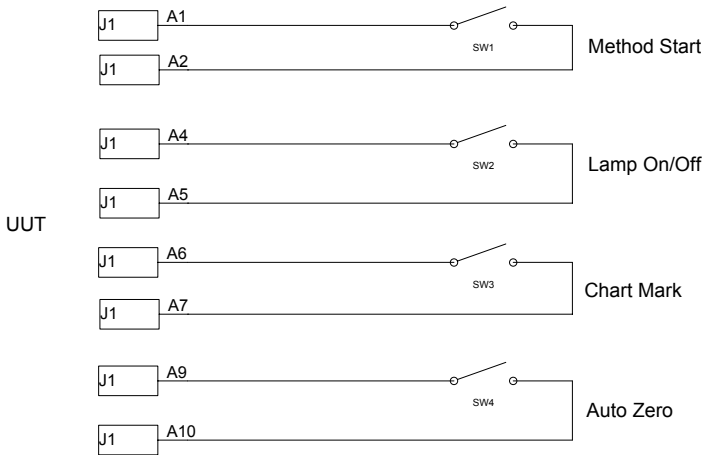

		TITLE 210000292 2998 DEBUG/TEST FIXTURE			
DRAWN BY: M Jussaume		SIZE	FSCM NO	DWG NO	REV
CHECKED:		B	TE82895	Internal Fixture Wiring Diagram	A
ISSUED:		SCALE 1 : 1		SHEET	5 OF 5