

DOCUMENT TITLE: **ACQUITY ARC QSM FINAL INSTRUMENT TEST**

SYSTEM/ASSEMBLY NAME: **ACQUITY ARC QSM PUMP**

PART NUMBER AFFECTED **186017000, 800000460, 186017010, 800000480, 186017016,
800000508, 186019001, 800000543**

TEST EQUIPMENT NAME: **ACQUITY SDS FINAL TEST STATION**

TEST EQUIPMENT NUMBER: **TE82943**



TEST SOFTWARE:

Note: Test Software 1.5 is valid for all P/Ns listed above, excluding 186019001, 800000543.

AUTHOR(S): **ED JACKSON**

DATE: **23-Jul-2015**

REVISED BY: **ED JACKSON**

DATE: **19-Jan-2021**

TABLE OF CONTENTS

I.	The Arc QSM Final Test	7
II.	The Pre-Test Power-up Electrical Safety Test Station.....	7
III.	The Arc QSM Automated Final Test Station	7
IV.	Functional Test System Features	8
V.	Test Fixture Setup (Initial).....	8
VI.	MeOH with Caffeine Bottle Prep.	9
VII.	Test Setup/Connections and Test Procedure with Automated Test Program	9
1.	Connections	9
2.	Test Program	10
VIII.	Test Description, Specification & Acceptance Criteria	15
1.	Electrical Safety	22
2.	Loader Download	22
3.	Reboot Firmware.....	22
4.	Firmware Version	22
5.	Test Instrument Type	22
6.	Serial Number	22
7.	Alarms at Bootup.....	22
8.	Gradient Start Input SHORT	22
9.	Gradient Start Input OPEN.....	23
10.	Stop Flow Input SHORT	23
11.	Stop Flow Input OPEN	23
12.	Leak Detect Connected.....	23
13.	Leak Detect Disconnected	23
14.	Leak Detect LEAK.....	23
15.	Alarms Recheck	23
16.	Seal Wash Pump Prime/Flow	23
17.	Input D Prime with MeOH.....	24
18.	Input C Prime with MeOH.....	24
19.	Input B Prime with MeOH.....	24
20.	Input A Prime with MeOH.....	24
21.	Degasser Pressure	25
22.	Valve Conditioning Action Step	25
23.	Dynamic Leak – Accumulator Leak Rate	25
24.	Dynamic Leak – Accumulator Percent of Stroke.....	25

25. Dynamic Leak – Accumulator Compressed Volume	26
26. Dynamic Leak – Accumulator Maximum Pressure	26
27. Dynamic Leak – Primary Leak Rate	26
28. Dynamic Leak – Primary Percent of Stroke	26
29. Dynamic Leak – Primary Compressed Volume	26
30. Dynamic Leak – Primary Maximum Pressure	26
31. Pressure Ripple at 5ml/min	26
32. Flow Rate Accuracy 2.5ml/min	26
33. Pressure Ripple at 2.5ml/min	26
34. Flow Rate Accuracy 0.3ml/min	26
35. Static Leak Decay Vent Valve to Mixer (Arc Premier QSM Only)	27
36. Static Leak Decay Vent Valve to Mixer1 to Vent Valve	27
37. Static Leak Decay Vent Valve to Mixer2 to Vent Valve	27
38. High Pressure Flow	27
39. Compositional Accuracy – AC95%AU	28
40. Compositional Accuracy – BD95%AU	28
41. Compositional Accuracy – BD5%AU	28
42. Compositional Accuracy – AC5%AU	28
43. Serial Number Re-verification	28
44. Fans	28
45. LEDS	28
IX. Test Program IPA Prep. Action Descriptions	29
46. Purge Line A of MeOH	29
47. Purge Line B of MeOH	29
48. Prime Line C with IPA	29
49. Prime Line D with IPA	29
50. Flow Line D with IPA for 45 Sec.	30
51. Purge Line C of IPA	30
52. Purge Line D and Seal Wash	30
53. Manual Power OFF the QSM	30
X. Appendix 1	31
XI. Appendix 2	32

EQUIPMENT REQUIRED

Quantity	Part Number	Description
1	TE82943	AcQuity SDS Automated Test Station
1	N/A	5/16 open ended wrench
1	N/A	5/8 open ended wrench
1	N/A	1/4 open ended wrench
1	Cat# 4701151	Dispensette Bottle-Top dispenser or equivalent
1	430001150	Tube, 316L, SS, 1/16 OD X .020, 16 Roughness Avg. (roughly 36" required)
5	289003536	SS Filter assembly *
5	WAT270714	Tubing cut to 12 inch lengths *
10	WAT024036	Tubing cut to 1.5 inch lengths *
2	WAT062341	Bottle Cap *
1	PI0406S	John Guest Acetal Copolymer Tube Fitting, Union Straight Connector, 3/16" Tube OD (for seal wash line connection)

* Used for Arc Bio QSM and Arc Premier QSM only.

DISPOSABLES REQUIRED

Quantity	Part Number	Description
As Required	N/A	100% Virgin Methanol
As Required	N/A	100% IPA
As Required	700005319	Production GPV Test Solution

REFERENCE DOCUMENTATION

Document Number	Description
730000710	Creating and Maintaining Technical Files
WAT000050MP	Waters Record Retention Corporate Policy
WAT046538	GENERIC Electrical Safety Test PROC.
721007937	Functional Specification
721013391	Functional Specification Bio
721020210	Product Requirements Document Arc HPLC
721020605	Product Requirement Document Arc Premier
735003370	Fluidics Plumbing Diagram
810000345	PERF SPEC, PCB, QSM PUMP ROHS
710000345	SCHEM, PCB, QSM PUMP ROHS
279004400	ASSY, PUMP, ARC BIO
N/A	Seal Wash Testing for Arc QSM Pumps Memo V00.doc
N/A	Prime Pump Testing for Arc QSM Pumps Memo V02.doc
N/A	High Pressure Testing for Arc QSM Pumps Memo V00.doc
N/A	VV to Output Testing for Arc QSM Pumps Memo V00.doc

DEFINITIONS AND ABBREVIATIONS

Term	Definition / Abbreviation
AC	Alternating Current
Arc QSM	Arc Quaternary Solvent Manager Pump
Arc Bio QSM	Arc Biocompatible Quaternary Solvent Manager Pump
Arc HPLC QSM	Arc High Performance Liquid Chromatography Quaternary Solvent Manager Pump
Arc Premier QSM	Arc Premier (Inert LC) Quaternary Solvent Manager Pump
ASP	Assembly Procedure
FSD	Functional Specification Document
IO	Input Output
IPA	Isopropyl Alcohol
LC	Liquid Chromatography
LED	Light Emitting Diode
LSL	Lower Specification Limit
MeOH	Methanol
N/A	Not Applicable
PC	Personal Computer
PCI	Peripheral Component Interconnect
P/N	Part Number
PRD	Product Requirements Document
PS	Performance Specification
PSC	Product Support Check
PSI	Pound per square inch
SAP	Systems Applications and Products
SDS	Solvent Delivery System
SS	Stainless Steel
Ti	Titanium
TSP	Test and Specification Procedure
USB	Universal Serial Bus
USL	Upper Specification Limit
UUT	Unit Under Test
VV	Vent Valve

I. The Arc QSM Final Test

The Arc QSM Final Test is performed consecutively on two separate test stations. The first test station provides the initial pretest power-up checks and electrical safety testing. The second station provides all of the remaining functional testing.

II. The Pre-Test Power-up Electrical Safety Test Station

The pretest power-up test station is used to perform an electrical safety test per Waters procedure WAT046538. All Test Units must pass this test in order to move to the Final Test Station.

III. The Arc QSM Automated Final Test Station

The Arc QSM Automated Final Test Station is designed to functionally test the Water's Corporation AcQuity Arc QSM Pump. Tests include: Software Download, Rear Panel Tests, Prime Pump, Degasser Tests, Dynamic Leak, Flow Rate Accuracy, Static Leak Vent Valve to Mixer Tubing, Compositional Accuracy, Fans, LEDs, IPA Fill and Drain.

The test strategy for this assembly is to test the functions that the unit as a whole must be able to provide.

The internal circuit boards, will have been through an In-Circuit and a Functional Test, prior to installing into this assembly. The Check Valves and Vent Valve Assembly will also have been tested and inspected.

The Arc QSM Automated Testing will verify that these assemblies, boards and all other assemblies, when assembled together correctly, will produce the expected performance.

For clarity, please note the following information and equivalent descriptions.

800 numbers are refurbished units and are the equivalent to the associated 186 number as shown below.

Part Number	Arc QSM	Arc Bio QSM	Arc Premier QSM	Description(s)
186017000, 800000460	X			Arc QSM
186017010, 800000480		X		Arc Bio QSM
186017016, 800000508	X			Arc HPLC QSM
186019001, 800000543			X	Arc Premier QSM

Prior to executing this test procedure on any QSM, the operator must check the Calibration Due label on the AnD Balance, and the Preventative Maintenance Due Labels on the TE82943 test box, and the TUV, to confirm these devices are within their valid date window.

IV. Functional Test System Features

The system uses a PC with added serial ports to communicate with the QSM, the test box TE82943, the AnD balance, and the AcQuity TUV. An added Ethernet card to the PC, communicates with the QSM for faster firmware downloading.

TE82943 includes a USB digital IO and an analog input module for rear panel testing. A Valco valve controls the direction of the pump's output flow to either one of three restrictors or a dead-end plug. The restrictors flow to the TUV-to-waste or to the AnD analytical balance, for flow rate testing. The QSM seal wash output can be connected to a vacuum pump for priming or diverted to the balance for flow rate testing. TE82943 front panel controls are under 'remote control' when the automated program is running.

The Test is controlled through an Operator Interface Test Program written in LabVIEW.

The Test Program has the following controls:

New Test – this button starts the testing on a newly assembled QSM.

Retest – this button will begin testing at a point determined appropriately close to where the last test run failure occurred.

Stop/Pause – this button, when active, will pause the program at the end of the current test step and prompt the operator with a choice to either stop or continue the testing.

Diagnostics – this button will launch the diagnostics page. In Diagnostics, the operator can select any test and verify the result.

Reprint Report – this button, when active, will send another hard copy of the test record to the printer.

The program will prompt the operator for information as required. Examples of inquiries include: QSM Serial Number, Factory Order Number, Operator Name, Part Number, etc... This will mainly occur during the initial launch of the test sequence.

Once the firmware has been loaded, the test runs without operator interaction, until it is time to pull lines from the MeOH and IPA bottles at the end of the test.

Operator Prompts can be easily identified from a distance by a yellow background popup window.

All data collected is sent to the SigmaSure server.

V. Test Fixture Setup (Initial)

Connect the monitor, keyboard, and mouse to the PC.

Connect the PC RS232 serial ports, USB, and Ethernet port (PCI card) to the proper locations as shown on the TE82943 test box schematic drawing diagram, Appendix 1.

Connect the PC "main board" Ethernet port to the Waters assigned facility network.

Connect TE82943 test box AC lines as shown on the schematic drawing. Refer to Appendix 1 Electrical Connections for details.

Connect the fluidic lines from TE82943 test box to the AnD scale and to waste as labeled on TE82943 rear panel. Refer to Appendix 2 Fluidic Connections for details.

Turn on TE82943 via the rear panel AC core module switch.

Turn on the AnD balance via the front panel power button.

Turn on the monitor and PC.

Enter the appropriate Login Name and Password.

Launch the Test Program by double clicking on the icon “TE82943 AcQuity Arc QSM Final Functional Test.exe”.

VI. MeOH with Caffeine Bottle Prep.

The Arc QSM Final Testing requires a bottle of MeOH with caffeine spike in order to perform the Compositional Accuracy testing. The desired concentration is 25mg/liter of caffeine.

Using the Dispensette Bottle-Top Dispenser (cat#4701151) attached to the 4 liter bottle of Production GPV Test Solution 700005319, draw out 5mL.

Inject the 5mL of GPV Test Solution into a 1 liter bottle of 100% Virgin Methanol.

Label the bottle as MeOH with 25mg/liter caffeine spike. Mix well.

Note: [(5mL/Liter = 25mg/Liter)].

For Arc Bio QSMs and Arc Premier QSMs, assembly the four parts from the Equipment Required Table marked for Arc Bio QSM and Arc Premier QSM only, as follows. Slide 12 inch tubes through bottle caps, two in one cap, three in the other, with approximately 2 inches exposed at the top of bottle cap. Attach 1.5 inch tubes to each end of the 12 inch tubes. Attach Stainless Steel Filters to the longer end of the 12 inch tubes. See figure below.



Arc Bio QSM and Arc Premier QSM SS Filter Assembly

VII. Test Setup/Connections and Test Procedure with Automated Test Program

1. CONNECTIONS

- 1.1. Connect the “remote controlled” AC line from the rear panel of TE82943 to the rear of the QSM.
- 1.2. Verify that the AC power is off. (Press the QSM front panel switch to off if necessary).
- 1.3. Connect the Ethernet cable from the PC to the rear of the QSM.
- 1.4. Connect the RS232 serial cable from the PC to the QSM.
- 1.5. Connect the 6-pin green Phoenix cable to the rear of the QSM. (This is the added QSM extension cable that connects from the QSM to the Side II Phoenix connector that is cabled to the TE82943 test box).
- 1.6. Connect the extension cable with the 3-pin c-grid connector, from the TE82943 box to the QSM front panel Leak Detector connector. The QSM requires the added extension cable that

contains the 82 ohm resistor. To prevent circuit damage, this extension cable is required for testing the QSM.

- 1.7. Connect the fluidic output from the mixer to the input filter port on the TE82943 front panel using the interface tube part number 430001150.
- 1.8. On the QSM, pull the Seal Wash output line from the drip tray's barbed fitting. Connect the line to the quick connect fitting on the seal wash line input located on the front panel of TE82943.
- 1.9. Connect the large waste tubing to the QSM drip tray barb fitting, located just under the front of the QSM.
- 1.10. Place the QSM **A**, **B**, and **Seal Wash** Inlet tubes with sinkers into the MeOH bottle. Note: Arc Bio QSMs and Arc Premier QSMs must swap out their Ti sinker filters for SS sinker filters prior to Final Functional Test. Swap back to the original Ti sinker filters at the completion of testing. Use the 3 tube Arc Bio QSM & Arc Premier QSM SS Filter Assembly.
- 1.11. Place the QSM **C** and **D** Inlet tubes with sinkers into the MeOH with Caffeine bottle. Note: Arc Bio QSMs and Arc Premier QSMs must swap out their Ti sinker filters for SS sinker filters prior to Final Functional Test. Swap back to the original Ti sinker filters at the completion of testing. Use the 2 tube Arc Bio QSM & Arc Premier QSM SS Filter Assembly.


2. TEST PROGRAM

- 2.1. Prepare and install the QSM to the test system following the Test Setup procedure above.
- 2.2. Ensure the test program screen is shown on the PC.
- 2.3. On the Test Program, press the **New Test** button to start the test.
- 2.4. An Input Information window will appear. Enter in all the requested data. The bar code scanner may be used to expedite the data entry. The program will reject any data input that is considered invalid. Press the **OK** button at the end when all data has been entered.
- 2.5. **Note For Repairs Department:** Enter **REPAIR** for the **Operator Name**. This will provide a special option in the test program to allow any version of firmware to pass.
- 2.6. The Test Program will prompt the operator for data entry for the Electrical Safety test. Enter the response necessary.
- 2.7. Next, the Test Program will load the latest firmware. Depending on if the QSM has already been loaded or not, the program will prompt the operator to either **Continue** testing or to **Reload** the firmware. Enter the response necessary.
- 2.8. From this point until just before the IPA Prep., the testing can be run unattended.
- 2.9. Any failures can be observed by a yellow popup window prompting the operator for attention.
- 2.10. Enter the response necessary for the popup. (See 2.18 below for operator failure options from here).
- 2.11. The Test Program will prompt the operator for proper operations of the fans. Enter the response necessary.


- 2.12. The Test Program will prompt the operator for proper operations for the Front Panel LEDs. Enter the response necessary.
- 2.13. If the testing is successful, a popup window will now appear at the start of IPA Prep.
- 2.14. The operator will be requested to pull the A, B and Seal Wash lines from the MeOH bottle and to disconnect the interface tube from the mixer. The operator will also be requested to pull the C and D lines from the MeOH & Caffeine bottle and to put both lines into the IPA bottle. Press **OK** when complete.
- 2.15. The Test Program will continue on until the operator is prompted to pull the C and D lines from the IPA bottle. Press **OK** when complete.
- 2.16. Once the Test Program completes, a PASS window will appear. Press the **OK** button.
- 2.17. Disconnect all electrical and tubing connections from the QSM as referenced in the Test Setup/Connections section above. The test is complete. Retrieve the hard copy Instrument Final Test Record printout from the printer. Verify the information, add additional comments if necessary, sign and date, then place into the DHR folder.
- 2.18. In the case of a test failure, the operator has two choices, Diagnostics or Retest.
- 2.19. Diagnostics can be entered by pressing the **Diagnostics** button. The QSM will power up and then a pull down selection will be available to the operator.
- 2.20. This Diagnostic selection can be used as an aid to verify any test the operator chooses to run.
- 2.21. The Diagnostic routine can be exited, repairs made to the QSM, and re-entered again as many times as necessary.
- 2.22. It is recommended that the operator run the failed test in the diagnostics menu and verify a passing result before returning to the testing program.
- 2.23. Note that some repairs, fluidic assembly replacements for example, may require re-priming the QSM before rerunning the failed test. All tests and actions are available in the Diagnostic routine to accommodate the operator's needs.
- 2.24. Once the operator feels the QSM will pass the failed test, the QSM can now be retested. Press the **Retest** button.
- 2.25. The Test Program will power-up the QSM. A popup window will prompt the operator for failure information. From the pull down, select the fail note that most closely corresponds with the repair made to the QSM to correct the failure. Press **OK** to continue.
- 2.26. The Test Program will now pickup in the test sequence at a point appropriate to the place of the last failure. It is usually at the same test, but in some cases may be at a point just before the failure.
- 2.27. Other Test Program features:
- 2.28. If necessary, the Final Test Record that prints at the end of a passing QSM, can be reprinted by pressing the **Reprint Report** button. This button is only active until another QSM is started.
- 2.29. The **Stop/Pause** button on the main Test Program window, when active, can be used to pause the testing at the end of the current test. The operator then has the option to **Continue** with the test or to **Stop** testing.

- 2.30. During some tests, a new window will be present with buttons providing the options of **Abort** or **Stop/Pause at end of test**.
- 2.31. In this case, the **Abort** button will Stop the testing as quickly as it can.
- 2.32. The **Stop/Pause at end of test** button will finish testing the particular test, and then pause. The operator then has the option to **Continue** with the test or to **Stop** testing.
- 2.33. The **Exit** button will exit out of the Test Program.


Figures:

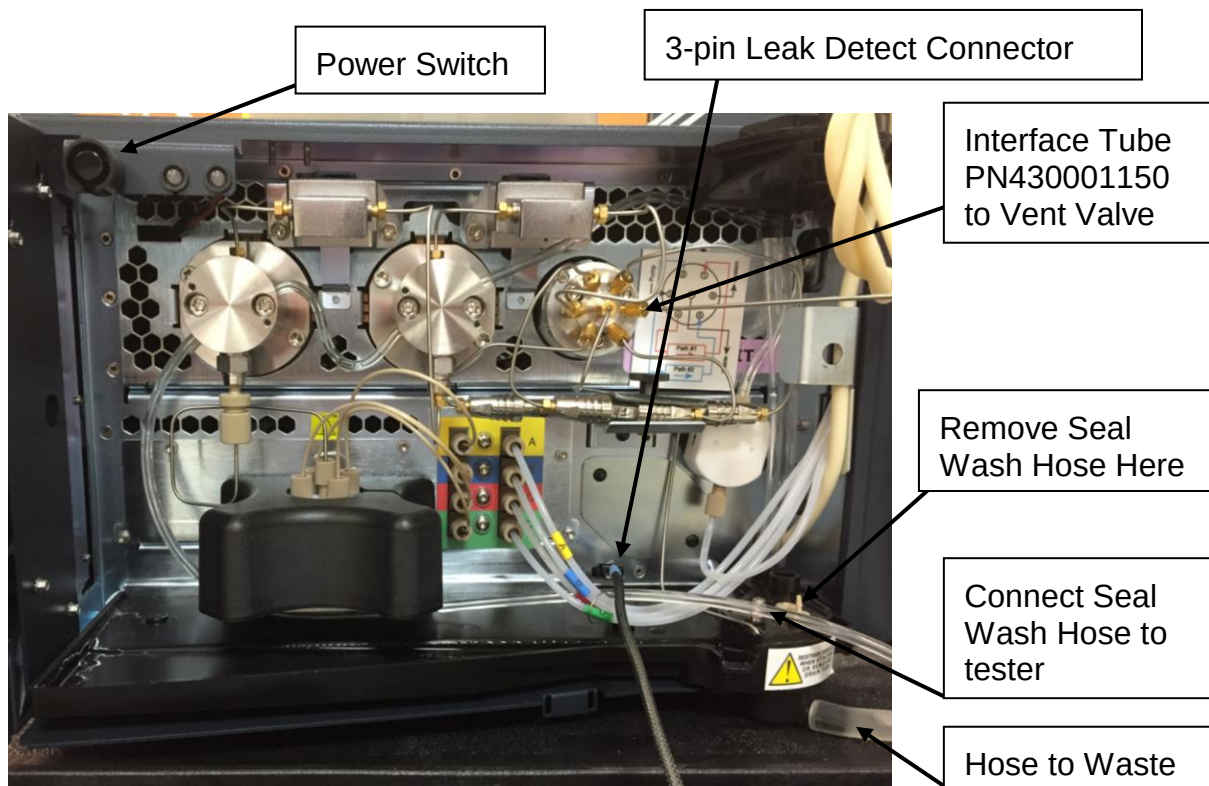

Arc QSM Front View shown for reference

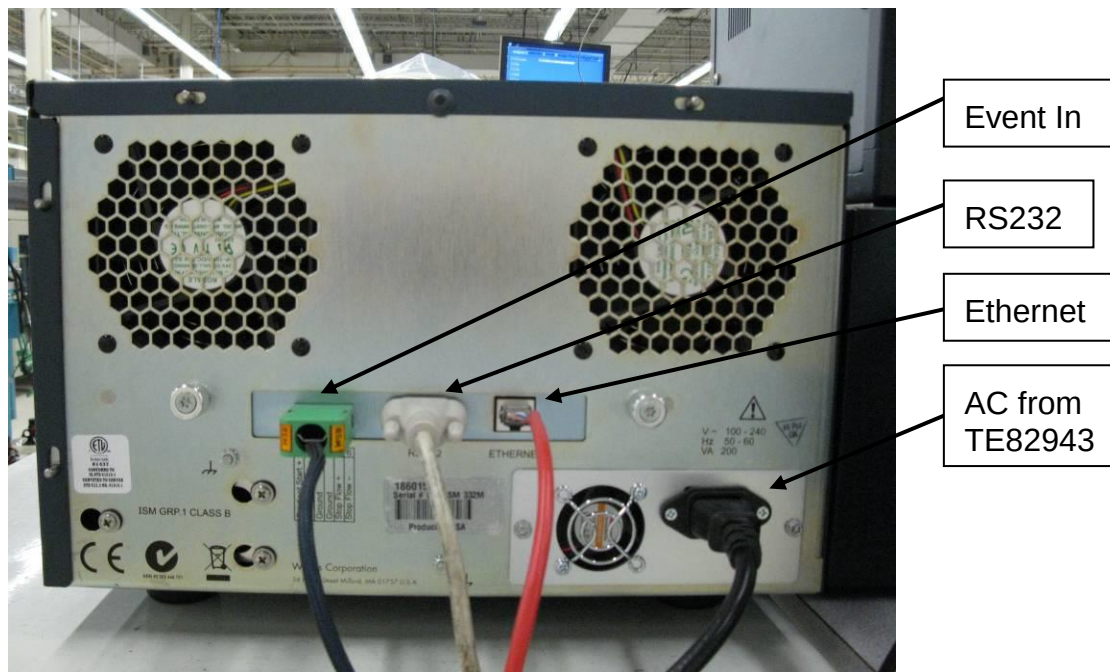

Arc QSM Rear View

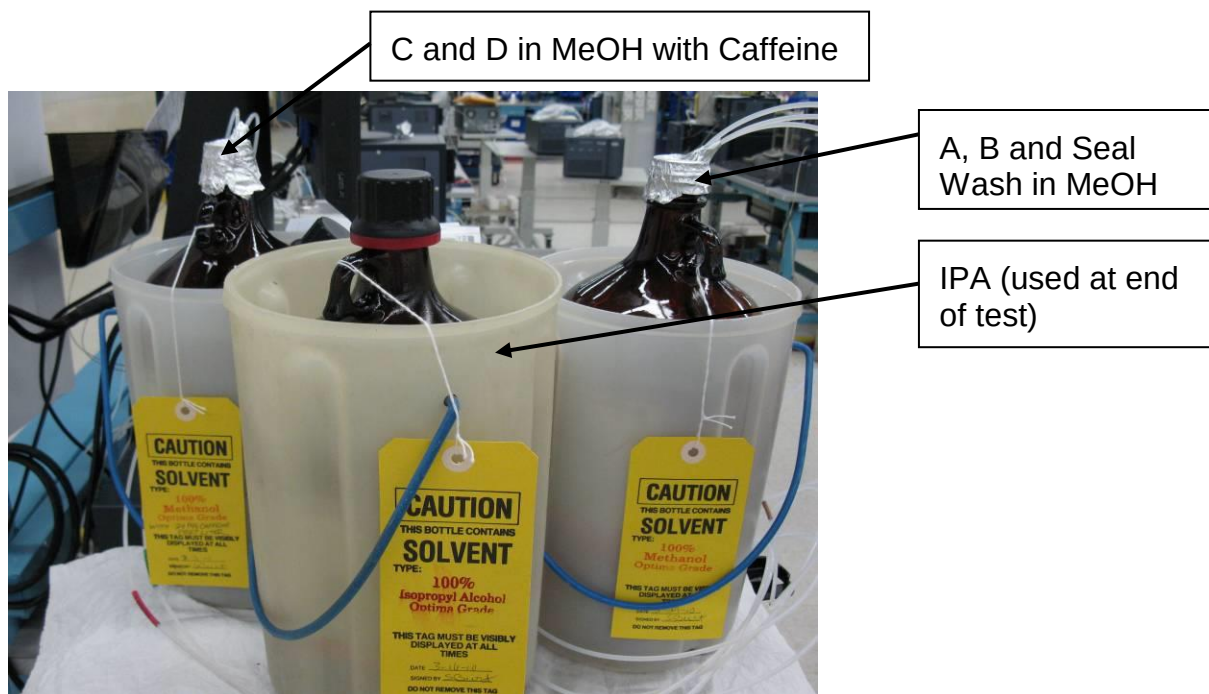

Arc QSM Input Lines in MeOH and MeOH with Caffeine Bottles
(The IPA Bottle is used at the end of testing)

Note: 4 liter bottles shown just for fluidic reference

VIII. Test Description, Specification & Acceptance Criteria

Test #				Description of Test	Test		Acceptance Criteria			Reference	
Procedure	Report				Operator	Automated Test Fixture	PASS / FAIL	LSL	USL	Unit	FSD, ASP, PS, PSCs, schematics, SAP, etc..
	Arc QSM	Arc Bio QSM	Arc Premier QSM								
				Test Fixture Calibrated and Preventative Maintenance Performed	X		X				1) TSP 735003612 sec.III 2,3) TSP 735003612 sec.III
1	1	1	1	Test Electrical Safety		X	X				1) PSC – Note 1 FSD 721007937 sec. 5.7 2,3) PSC – Note 1 FSD 721013391 sec. 5.7
2	2	2	2	Test Loader Download		X	X				1) PSC – Note 1 2,3) PSC – Note 1
3	3	3	3	Test Reboot Firmware		X	X				1) PSC – Note 1 2,3) PSC – Note 1
4	4	4	4	Test Firmware Version		X	X				1) PSC – Note 1 SAP (CS03) 2,3) PSC – Note 1 SAP (CS03)
5	5	5	5	Test Instrument Type		X	X				1) PSC – Note 3 2,3) PSC – Note 3 ASP 279004400 p.38
6	6	6	6	Test Serial Number		X	X				1) PSC – Notes 1 & 2 2,3) PSC – Notes 1 & 2

7	7	7	7	Test Alarms at Bootup		X	X				1) PSC – Note 3 FSD 721007937 sec.5.1.7
											2,3) PSC – Note 3 FSD 721013391 sec.5.1.7
8	8	8	8	Test Gradient Start Input SHORT		X	X				1) PSC – Note 3 FSD 721007937 sec.5.2.4.3
											2,3) PSC – Note 3 FSD 721013391 sec.5.2.4.3
9	9	9	9	Test Gradient Start Input OPEN		X	X				1) PSC – Note 3 FSD 721007937 sec.5.2.4.3
											2,3) PSC – Note 3 FSD 721013391 sec.5.2.4.3
10	10	10	10	Test Stop Flow Input SHORT		X	X				1) PSC – Note 3 FSD 721007937 sec.5.2.4.3
											2,3) PSC – Note 3 FSD 721013391 sec.5.2.4.3
11	11	11	11	Test Stop Flow Input OPEN		X	X				1) PSC – Note 3 FSD 721007937 sec.5.2.4.3
											2,3) PSC – Note 3 FSD 721013391 sec.5.2.4.3
12	12	12	12	Test Leak Detect Connected		X	X				1) PSC – Note 3 PS 810000345 sec.2.10.5, 710000345 p.9
											2,3) PSC – Note 3 PS 810000345 sec.2.10.5, 710000345 p.9

											1) PSC – Note 3 PS 810000345 sec.2.10.5, 710000345 p.9
13	13	13	13	Test Leak Detect Disconnected		X	X				2,3) PSC – Note 3 PS 810000345 sec.2.10.5, 710000345 p.9
						X	X				1) PSC – Note 3 PS 810000345 sec.2.10.5, 710000345 p.9
14	14	14	14	Test Leak Detect Leak		X	X				2,3) PSC – Note 3 PS 810000345 sec.2.10.5, 710000345 p.9
						X	X				1) PSC – Note 3 FSD 721007937 sec.5.1.7
15	15	15	15	Test Alarms Recheck		X	X				2,3) PSC – Note 3 FSD 721013391 sec.5.1.7
						X	X				1) PSC – Note 4 FSD 721007937 sec.5.4.6
16	16	16	16	Test Seal Wash Pump Prime/Flow		X	X	2.000	5.000	ml/min	2,3) PSC – Note 4 FSD 721013391 sec.5.4.6
						X	X				1) FSD 721007937 sec.5.1.9, PSC – Note 5
17	17	17		Test Input D Prime with MeOH		X	X	30.000	100.000	PSI	2) FSD 721013391 sec.5.1.9, PSC – Note 5
17			17	Test Input D Prime with MeOH		X	X	24.000	100.000	PSI	3) FSD 721013391 sec.5.1.9, PSC – Note 5
18	18	18		Test Input C Prime with MeOH		X	X	30.000	100.000	PSI	1) FSD 721007937 sec.5.1.9, PSC – Note 5

											2) FSD 721013391 sec.5.1.9, PSC – Note 5
18			18	Test Input C Prime with MeOH		X	X	24.000	100.000	PSI	3) FSD 721013391 sec.5.1.9, PSC – Note 5
19	19	19		Test Input B Prime with MeOH		X	X	30.000	100.000	PSI	1) FSD 721007937 sec.5.1.9, PSC – Note 5
											2) FSD 721013391 sec.5.1.9, PSC – Note 5
19			19	Test Input B Prime with MeOH		X	X	24.000	100.000	PSI	3) FSD 721013391 sec.5.1.9, PSC – Note 5
20	20	20		Test Input A Prime with MeOH		X	X	30.000	100.000	PSI	1) FSD 721007937 sec.5.1.9, PSC – Note 5
											2) FSD 721013391 sec.5.1.9, PSC – Note 5
20			20	Test Input A Prime with MeOH		X	X	24.000	100.000	PSI	3) FSD 721013391 sec.5.1.9, PSC – Note 5
21	21			Test Degasser Pressure		X	X	0.000	1.300	PSI	1) FSD 721007937 sec.5.14.8 PSC – Note 2
21		21	21	Test Degasser Pressure		X	X	0.000	1.547	PSI	2,3) FSD 721013391 sec.5.14.8 PSC – Note 2
23	22	22	22	Test Dynamic Leak - Accum. Leak Rate		X	X	1.000	375.000	nL/min	1) FSD 721007937 sec.5.11.1
											2,3) FSD 721013391 sec.5.14.9
24	23	23	23	Test Dynamic Leak - Accum. Percent of Stroke		X	X	1.000	30.000	%	1) FSD 721007937 sec.5.11.1
											2,3) FSD 721013391 sec.5.14.9
25	24	24	24	Test Dynamic Leak - Accum. Compressed Volume		X	X	1.000	125.000	uL	1) FSD 721007937 sec.5.11.1

											2,3) FSD 721013391 sec.5.14.9
											1) FSD 721007937 sec.5.11.1
26	25	25	25	Test Dynamic Leak - Accum. Maximum Pressure		X	X	9000.000	9500.000	PSI	2,3) FSD 721013391 sec.5.14.9
											1) FSD 721007937 sec.5.11.1
27	26	26	26	Test Dynamic Leak - Primary Leak Rate		X	X	1.000	375.000	nL/min	2,3) FSD 721013391 sec.5.14.9
											1) FSD 721007937 sec.5.11.1
28	27	27	27	Test Dynamic Leak - Primary Percent of Stroke		X	X	1.000	50.000	%	2,3) FSD 721013391 sec.5.14.9
											1) FSD 721007937 sec.5.11.1
29	28	28	28	Test Dynamic Leak - Primary Compressed Volume		X	X	1.000	125.000	uL	2,3) FSD 721013391 sec.5.14.9
											1) FSD 721007937 sec.5.11.1
30	29	29	29	Test Dynamic Leak - Primary Maximum Pressure		X	X	7000.000	7500.000	PSI	2,3) FSD 721013391 sec.5.14.9
											1) FSD 721007937 sec.5.14.6
31	30	30	30	Test Pressure Ripple at 5ml/min		X	X	0.000	28.000	PSI	2,3) FSD 721013391 sec.5.14.6
											1) FSD 721007937 sec.5.14.1
32	31	31	31	Test Flow Rate Accuracy 2.5ml/min		X	X	2.475	2.525	ml/min	2,3) FSD 721013391 sec.5.14.1
33	32			Test Pressure Ripple at 2.5ml/min		X	X	0.000	13.000	PSI	1) FSD 721007937 sec.5.14.6
33		32	32	Test Pressure Ripple at 2.5ml/min		X	X	0.000	25.000	PSI	2,3) FSD 721013391 sec.5.14.6
											1) FSD 721007937 sec.5.14.1
34	33	33	33	Test Flow Rate Accuracy 0.3ml/min		X	X	0.297	0.303	ml/min	2,3) FSD 721013391 sec.5.14.1

35			34	Test Static Leak Decay VV to Mixer		X	X	1.000	250.000	PSI/min	3) PSC – Note 7
36	34	34		Test Static Leak Decay VV to Mixer1 to VV		X	X	1.000	250.000	PSI/min	1) PSC – Note 7 2) PSC – Note 7
37	35	35	35	Test Static Leak Decay VV to Mixer2 to VV		X	X	1.000	250.000	PSI/min	1) PSC – Note 7 2,3) PSC – Note 7
38	36	36	36	Test High Pressure		X	X	6000.000	9500.000	PSI	1) PSC – Note 6 FSD 721007937 sec.5.3.1 2,3) PSC – Note 6 FSD 721013391 sec.5.3.1
39	37	37	37	Test Compositional Accuracy – AC95%AU		X	X	94.500	95.500	%	1) FSD 721007937 sec.5.14.3 2,3) FSD 721013391 sec.5.14.3
40	38	38	38	Test Compositional Accuracy – BD95%AU		X	X	94.500	95.500	%	1) FSD 721007937 sec.5.14.3 2,3) FSD 721013391 sec.5.14.3
41	39	39	39	Test Compositional Accuracy – BD5%AU		X	X	4.500	5.500	%	1) FSD 721007937 sec.5.14.3 2,3) FSD 721013391 sec.5.14.3
42	40	40	40	Test Compositional Accuracy – AC5%AU		X	X	4.500	5.500	%	1) FSD 721007937 sec.5.14.3 2,3) FSD 721013391 sec.5.14.3
44	41	41	41	Test Serial Number Re-verification		X	X				1) PSC – Notes 1 & 2 2,3) PSC – Notes 1 & 2
44	42	42	42	Test Fans	X	X	X				1) FSD 721007937 sec.5.12.8, PSC – Note 3 2,3) FSD 721013391 sec.5.12.8, PSC – Note 3

										1) FSD 721007937 sec.5.2.6, PSC – Note 3
45	43	43	43	Test LEDs	X	X	X			2,3) FSD 721013391 sec.5.2.6, PSC – Note 3
	44	44	44	Acquity ArcQSM Final Test Overall Result		X	X			

References:

- 1) References for P/N 186017000 Arc QSM and P/N 186017016 Arc HPLC QSM.
- 2) References for P/N 186017010 Arc Bio QSM.
- 3) References for P/N 186019001 Arc Premier QSM.

Note: P/N 186017016 manufacturing test specifications are defined by PRD 721020210.

Note: P/N 186019001 manufacturing test specifications are defined by PRD 721020605.

PSC Notes:

1. Pre-test condition.
2. Internal function of instrument firmware.
3. Verify invalidated assembly process.
4. Reference *Seal Wash Testing for Arc QSM Pumps Memo V00.doc* for system test limit calculations.
5. Reference *Prime Pump Testing for Arc QSM Pumps Memo V02.doc* for system test limit calculations.
6. Reference *High Pressure Testing for Arc QSM Pumps Memo V00.doc* for system test limit calculations.
7. Reference *VV to Output Testing for Arc QSM Pumps Memo V00.doc* for system test limit calculations.

1. ELECTRICAL SAFETY

The operator is prompted to enter the Electrical Safety Test result.

2. LOADER DOWNLOAD

The QSM is powered up. During this time, the serial communications is being monitored. It is then determined what version firmware, if any, is loaded on the QSM. If there is no firmware previously loaded, the test program will load the latest version of firmware. Otherwise it will prompt the operator to continue on testing or reload the latest version.

The “Loader” program is called from the test program to load the firmware via the QSM’s Ethernet port. Once loaded, the QSM is rebooted.

3. REBOOT FIRMWARE

The QSM is powered up. During this time, the serial communications is being monitored. It is then determined if the QSM firmware boots up as expected.

4. FIRMWARE VERSION

The serial command **version** is sent to the QSM. The pump response is compared against the latest version name located in the file *TestStringsFile.txt*.

5. TEST INSTRUMENT TYPE

The serial command **jumpers** is sent to the UUT. The jumper configuration is returned. Electrical jumper number 6 (pins 11 & 12) on J2 of the UUT personality board, is used to tell the firmware the instrument type. No jumper is for the Arc QSM. Added jumper is for the Arc Bio QSM and Arc Premier QSM. The Arc Premier QSM has an additional jumper number 5 (pins 9 & 10) on J2.

6. SERIAL NUMBER

The scanned serial number from the Input Information Window is loaded into the QSM via the serial command **setserial serialnumber**. The serial number is then read back out of the QSM via the command **showserial**. The response is then compared back to the scanned serial number. The QSM is then rebooted to clear Alarms associated with the serial number update.

7. ALARMS AT BOOTUP

Once the QSM reboots, the serial command **printalarm** is sent to the QSM. Any alarms present will be displayed to the operator and the testing will be halted.

8. GRADIENT START INPUT SHORT

The QSM rear panel input pins labeled **Gradient Start** are shorted together. The QSM is then sent the serial command **peek 0x500038**. The expected serial response is **01**.

9. GRADIENT START INPUT OPEN

The QSM rear panel input pins labeled **Gradient Start** are left open. The QSM is then sent the serial command **peek 0x500038**. The expected serial response is **00**.

10. STOP FLOW INPUT SHORT

The QSM rear panel input pins labeled **Stop Flow** are shorted together. The QSM is then sent the serial command **peek 0x500038**. The expected serial response is **02**.

11. STOP FLOW INPUT OPEN

The QSM rear panel input pins labeled **Stop Flow** are left open. The QSM is then sent the serial command **peek 0x500038**. The expected serial response is **00**.

12. LEAK DETECT CONNECTED

The QSM front panel Leak Detect input pins 1-2 are connected together with an 82 ohm resistor. This provides a 3.2 vdc input to pin 1 of the Personality board. There is also a 1K ohm resistor from pins 2-3. The QSM is then sent the serial command **peek 0x50003b**. The expected serial response is **02**.

13. LEAK DETECT DISCONNECTED

The QSM front panel Leak Detect input pins 1-2 are left open. There is a 1K ohm resistor from pins 2-3. The QSM is then sent the serial command **peek 0x50003b**. The expected serial response is **00**.

14. LEAK DETECT LEAK

The QSM front panel Leak Detect input pin 3 is shorted to GND. There is also a 1K ohm resistor from pins 2-3. The QSM is then sent the serial command **peek 0x50003b**. The expected serial response is **01**.

15. ALARMS RECHECK

The serial command **printalarm** is sent to the QSM. Any alarms present will be displayed to the operator and the testing will be halted.

16. SEAL WASH PUMP PRIME/FLOW

The serial command **swpprime** is sent to the QSM to start the seal wash pump. The QSM's seal wash pump can be heard running by a clicking sound. The vacuum pump located inside TE82943 is activated. The vacuum pump helps the seal wash pump prime by pulling MeOH through the seal wash line. After enough time has elapsed to draw the MeOH through the system, the test program then switches from Priming to Establishing Flow. The test waits for a period of time to allow the MeOH to be pumped by the seal wash pump through TE82943 and out into the AnD balance. Next, the Flow Rate Testing begins.

The AnD scale is monitored for 2 minutes. Balance readings are taken at the beginning and end of this time. The measured flow rate is then calculated.

17.INPUT D PRIME WITH MEOH

The serial command **gpvsetvalve d** is sent to the QSM to activate the QSM's GPV valve D. The serial command **setflow 10 p** is sent to the QSM to start the pump priming MeOH at 10ml/min to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for approximately 120 seconds to allow enough time to draw MeOH through the system. The serial command **setflow 5 p** is then sent to the QSM to slow the prime to 5ml/min. The next (last) 60 seconds of accumulator pressure data readings are collected and averaged to provide a test measurement. Also, a counter is set to count any number of accumulator pressure readings during the last 60 seconds that fall outside of the test limits. Greater than three reading outside the PSI limit range of 20 (For Arc Premier 14) to 100 constitute a failure.

18.INPUT C PRIME WITH MEOH

The serial command **gpvsetvalve c** is sent to the QSM to activate the QSM's GPV valve C. The serial command **setflow 10 p** is then sent to the QSM to start the pump priming MeOH at 10ml/min to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for approximately 120 seconds to allow enough time to draw MeOH through the system. The serial command **setflow 5 p** is then sent to the QSM to slow the prime to 5ml/min. The next (last) 60 seconds of accumulator pressure data readings are collected and averaged to provide a test measurement. Also, a counter is set to count any number of accumulator pressure readings during the last 60 seconds that fall outside of the test limits. Greater than three reading outside the PSI limit range of 20 (For Arc Premier 14) to 100 constitute a failure.

19.INPUT B PRIME WITH MEOH

The serial command **gpvsetvalve b** is sent to the QSM to activate the QSM's GPV valve B. The serial command **setflow 10 p** is sent to the QSM to start the pump priming MeOH at 10ml/min to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for approximately 120 seconds to allow enough time to draw MeOH through the system. The serial command **setflow 5 p** is then sent to the QSM to slow the prime to 5ml/min. The next (last) 60 seconds of accumulator pressure data readings are collected and averaged to provide a test measurement. Also, a counter is set to count any number of accumulator pressure readings during the last 60 seconds that fall outside of the test limits. Greater than three reading outside the PSI limit range of 20 (For Arc Premier 14) to 100 constitute a failure.

20.INPUT A PRIME WITH MEOH

The serial command **gpvsetvalve a** is sent to the QSM to activate the QSM's GPV valve A. The serial command **setflow 10 p** is sent to the QSM to start the pump priming MeOH at 10ml/min to

waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for approximately 120 seconds to allow enough time to draw MeOH through the system. The serial command **setflow 5 p** is sent to the QSM to slow the prime to 5ml/min. The last 60 seconds of accumulator pressure data readings are collected and averaged to provide a test measurement. Also, a counter is set to count any number of accumulator pressure readings during the last 60 seconds that fall outside of the test limits. Greater than three reading outside the PSI limit range of 20 (For Arc Premier 14) to 100 constitute a failure.

21. DEGASSER PRESSURE

The serial command **wdegasserstatus** is sent to the QSM. The QSM's degasser pressure reading is returned in response.

22. VALVE CONDITIONING ACTION STEP

This routine is used to run-in the pump seals at pressure. This will allow the valve seals to seat. The file *SealConditioningFile.txt* is used to control this action. Parameters for time, pump flow rate, and restrictor number are stored. The routine will set up the specified restrictor. Then a serial command will send the **setflow x** command, where **x** is the desired flow rate. The pressure is displayed and the routine will run for the specified time. Test Engineering will determine the parameters to use for this action based on seal reliability data. Parameters used at this time are 240 sec., 0.7 ml/min, restrictor 3. For this step, the vent valve is moved with the serial command **setventvalve systemM2** in order to fill this path with fluid for the VV to Mixer2 to VV test. The vent valve is returned to position1 at the completion of this step.

23. DYNAMIC LEAK – ACCUMULATOR LEAK RATE

The serial command **leaktest 9000 A 0 0 0 0** is sent to the QSM. This launches a QSM internal test which does the following:

The QSM will fill and empty the Accumulator and Primary cylinders several times to obtain a good solvent intake. The vent valve is set to a midpoint state between the vent and system outputs. This closes off the output of the pump. The Accumulator is pressured to 9K PSI. The Accumulator pressure is monitored, and the Accumulator motor is stepped 'dynamically' to maintain the set pressure. The Leak Rate is then calculated. Next the Primary is pressured to 7K PSI. The Primary pressure is monitored, and the Primary motor is stepped 'dynamically' to maintain the set pressure. The Leak Rate is then calculated.

The results are available for display at the completion of the test.

Consistent failures are an indication of a fitting leak, bad seals, faulty check valve, etc..

Clues to the exact failure can be derived from the data results. Diagnosis information is sometimes given by the internal test. This will be displayed to the operator when available.

24. DYNAMIC LEAK – ACCUMULATOR PERCENT OF STROKE

Refer above for test description.

25. DYNAMIC LEAK – ACCUMULATOR COMPRESSED VOLUME

Refer above for test description.

26. DYNAMIC LEAK – ACCUMULATOR MAXIMUM PRESSURE

Refer above for test description.

27. DYNAMIC LEAK – PRIMARY LEAK RATE

Refer above for test description.

28. DYNAMIC LEAK – PRIMARY PERCENT OF STROKE

Refer above for test description.

29. DYNAMIC LEAK – PRIMARY COMPRESSED VOLUME

Refer above for test description.

30. DYNAMIC LEAK – PRIMARY MAXIMUM PRESSURE

Refer above for test description.

31. PRESSURE RIPPLE AT 5ML/MIN

The serial command **setflow 5 n** is sent to the QSM. The output of the pump is routed through a restrictor inside TE82943 which will provide approximately 2800 PSI pressure. The flow is then routed out to the AnD Balance. The pump will run for 120 seconds to initialize the flow to the balance. Then the Pressure Ripple Testing will begin and run for 60 seconds. The serial command **getp** is sent to the QSM to retrieve the results.

32. FLOW RATE ACCURACY 2.5ML/MIN

The serial command **setflow 2.5 n** is sent to the QSM. The output of the pump is routed through a restrictor inside TE82943 which will provide approximately 1250 PSI pressure. The flow is then routed out to the AnD Balance. The pump will run for 120 seconds to initialize the flow to the balance. Then the Flow Rate Testing will begin and run for 60 seconds. Readings are taken from the balance at the beginning and end of this time. The measured flow rate is then calculated.

33. PRESSURE RIPPLE AT 2.5ML/MIN

During the above 2.5ml/min flow rate accuracy testing, the pressure ripple is being recorded. The serial command **getp** is sent to the QSM to retrieve the results.

34. FLOW RATE ACCURACY 0.3ML/MIN

The serial command **setflow .3 n** is sent to the QSM. The output of the pump is routed through a restrictor inside TE82943 which will provide approximately 1250 PSI pressure. The flow is then routed out to the AnD Balance. The pump will run for 120 seconds to initialize the flow to the balance. Then the Flow Rate Testing will begin and run for 300 seconds. Readings are taken from the balance at the beginning and end of this time. The measured flow rate is then calculated.

35. STATIC LEAK DECAY VENT VALVE TO MIXER (ARC PREMIER QSM ONLY)

The serial command **setventvalve systemM1** and **setflow flowrate** is sent to the QSM. Where *flowrate* is a variable that is dependent on measured pressure. The output of the pump is dead ended inside TE82943. The test begins by ramping the pressure to a set point of 8000 PSI. Once at 8000 PSI, the flow rate is reduced to zero and the pressure allowed to stabilize. The last 60 seconds of this test is used to capture the pressure decay.

Note: This test is intended to test the connections from the vent valve to the mixer. It includes the front connection of TE82943, since the dead-end plug is located inside the tester. Any tester leaks, have been attributed to a worn out QSM interface tubing assembly. Replace the interface tubing assembly part number 430001150 if necessary.

36. STATIC LEAK DECAY VENT VALVE TO MIXER1 TO VENT VALVE

The serial command **setventvalve systemM1** and **setflow flowrate** is sent to the QSM. Where *flowrate* is a variable that is dependent on measured pressure. The output of the pump is dead ended inside TE82943. The test begins by ramping the pressure to a set point of 8000 PSI. Once at 8000 PSI, the flow rate is reduced to zero and the pressure allowed to stabilize. The last 60 seconds of this test is used to capture the pressure decay.

Note: This test is intended to test the connections from the vent valve to the mixer. It includes the front connection of TE82943, since the dead-end plug is located inside the tester. Any tester leaks, have been attributed to a worn out QSM interface tubing assembly. Replace the interface tubing assembly part number 430001150 if necessary.

37. STATIC LEAK DECAY VENT VALVE TO MIXER2 TO VENT VALVE

The serial command **setventvalve systemM2** and **setflow flowrate** is sent to the QSM. Where *flowrate* is a variable that is dependent on measured pressure. The output of the pump is dead ended inside TE82943. The test begins by ramping the pressure to a set point of 8000 PSI. Once at 8000 PSI, the flow rate is reduced to zero and the pressure allowed to stabilize. The last 60 seconds of this test is used to capture the pressure decay.

Note: This test is intended to test the connections from the vent valve to the mixer. It includes the front connection of TE82943, since the dead-end plug is located inside the tester. Any tester leaks, have been attributed to a worn out QSM interface tubing assembly. Replace the interface tubing assembly part number 430001150 if necessary.

38. HIGH PRESSURE FLOW

During the compositional accuracy test below, the high-pressure test is conducted. The serial command **setflow 0.7 n** is sent to the QSM. The output of the pump is routed through a restrictor inside TE82943 which will provide approximately 8000 PSI pressure. The flow is then routed out to

the AcQuity TUV and then to waste. The pump will run for 510 seconds and the high-pressure reading is verified at the end.

39. COMPOSITIONAL ACCURACY – AC95%AU

The serial command **set pump.minintakevelocity 30000** is sent to the QSM. The compositional accuracy test is designed to verify the ability of the GPV (4 gradient proportioning valves) to operate properly and provide the correct flow. This is accomplished by adding a spiked solution of MeOH to two of the input lines and mixing, or proportioning the spiked solution with the non-spiked MeOH lines and measuring the output composition. An AcQuity TUV detector is used to measure the absorbance of caffeine to provide this function. (Inputs A,B in MeOH ; Inputs C,D in MeOH with caffeine).

The test starts by running a clean MeOH solution through GPV 50%A and 50%B for 510 seconds. This provides a zero reference for the TUV absorbance. The TUV is then sent an autozero.

GPV 50%C and 50%D are selected and a spiked solution of MeOH is run for 630 seconds. This provides a full-scale reference for the TUV absorbance.

A 95% spike and 5% clean solution will be mixed using GPV 5%A and 95%C and run for 435 seconds.

40. COMPOSITIONAL ACCURACY – BD95%AU

Refer above for test description.

A 95% spike and 5% clean solution will be mixed using GPV 5%B and 95%D and run for 270 seconds.

41. COMPOSITIONAL ACCURACY – BD5%AU

Refer above for test description.

A 5% spike and 95% clean solution will be mixed using GPV 95%B and 5%D and run for 530 seconds.

42. COMPOSITIONAL ACCURACY – AC5%AU

Refer above for test description.

A 5% spike and 95% clean solution will be mixed using GPV 95%A and 5%C and run for 240 seconds.

43. SERIAL NUMBER RE-VERIFICATION

The serial number is read back out of the QSM via the command **showserial**. The response is then compared back to the scanned serial number from the beginning of the test.

44. FANS

The operator is prompted to verify that both fans are on and blowing outward.

45. LEDS

The operator is prompted to verify that the Front Panel Power and Flow LEDs are working properly. The Power LED will be lit Green. Using a serial **poke address** command, the Flow LED will be verified in the Off, Green, and Red states.

IX. Test Program IPA Prep. Action Descriptions

The following list describes the actions performed for the IPA preparation before the QSM can ship. During the test program run, this procedure must be completed in order for the QSM to be considered a passing unit. The final test record is generated at the end of this process.

46. PURGE LINE A OF MEOH

The operator is instructed to pull the A, B and Seal Wash input lines out of the MeOH bottle and to disconnect the output interface tubing from the mixer. Lines C and D are to be pulled out of the MeOH and caffeine bottle and placed into the IPA bottle.

The serial commands **gpvsetvalve a** is sent to the QSM to activate the QSM's GPV valve A. Input line A is selected. The serial command **setflow 10 p** is sent to the QSM to start priming the residual internal MeOH to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for 110 seconds to allow enough time to purge the MeOH throughout the system. The operator may observe the transducer pressures dropping to near zero when the last of the MeOH is purged.

47. PURGE LINE B OF MEOH

The serial commands **gpvsetvalve b** is sent to the QSM to activate the QSM's GPV valve B. Input line B is selected. The serial command **setflow 10 p** is sent to the QSM to start priming the residual internal MeOH to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for 110 seconds to allow enough time to purge the MeOH throughout the system. The operator may observe the transducer pressures dropping to near zero when the last of the MeOH is purged.

48. PRIME LINE C WITH IPA

The serial commands **gpvsetvalve c** is sent to the QSM to activate the QSM's GPV valve C. Input line C is selected. The serial command **setflow 10 p** is sent to the QSM to start priming the IPA to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for 120 seconds to allow enough time to prime the IPA throughout the system. The IPA prime also provides the function of flushing any caffeine residue.

49. PRIME LINE D WITH IPA

The serial commands **gpvsetvalve d** is sent to the QSM to activate the QSM's GPV valve D. Input line D is selected. The serial command **setflow 10 p** is sent to the QSM to start priming the IPA to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for 120 seconds to allow enough time to prime the IPA throughout the system. The IPA prime also provides the function of flushing any caffeine residue.

50. FLOW LINE D WITH IPA FOR 45 SEC.

The serial command **setflow 1 n** is sent to the QSM to start flowing the IPA through the vent valve and out the mixer port. The priming will run for 45 seconds to allow enough time to flow the IPA through the output.

51. PURGE LINE C OF IPA

The operator is instructed to pull the C and D input lines out of the IPA bottle.

The serial commands **gpvsetvalve c** is sent to the QSM to activate the QSM's GPV valve C. Input line C is selected. The serial command **setflow 10 p** is sent to the QSM to start priming the IPA to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.

The priming will run for 100 seconds to allow enough time to purge the IPA throughout the system. The operator may observe the transducer pressures dropping to near zero when the last of the IPA is purged.

52. PURGE LINE D AND SEAL WASH

The serial commands **gpvsetvalve d** is sent to the QSM to activate the QSM's GPV valve D. Input line D is selected. The serial command **setflow 10 p** is sent to the QSM to start priming the IPA to waste. The two pressure transducers are monitored and displayed at approximately 1 second intervals.


The priming will run for 100 seconds to allow enough time to purge the IPA throughout the system. The operator may observe the transducer pressures dropping to near zero when the last of the IPA is purged. The seal wash pump is activated, and the test box vacuum pump is activated to purge the seal wash line during this time.

186017010 Only Note: Upon completion, the Operator is prompted to replace all the inlet line SS Filters with the original Ti Filters.

53. MANUAL POWER OFF THE QSM


The operator is instructed to press the QSM front panel power switch to power off the UUT. The power state of the QSM is monitored by the test program. The test program will continue to the end of testing when power off is detected

X. Appendix 1

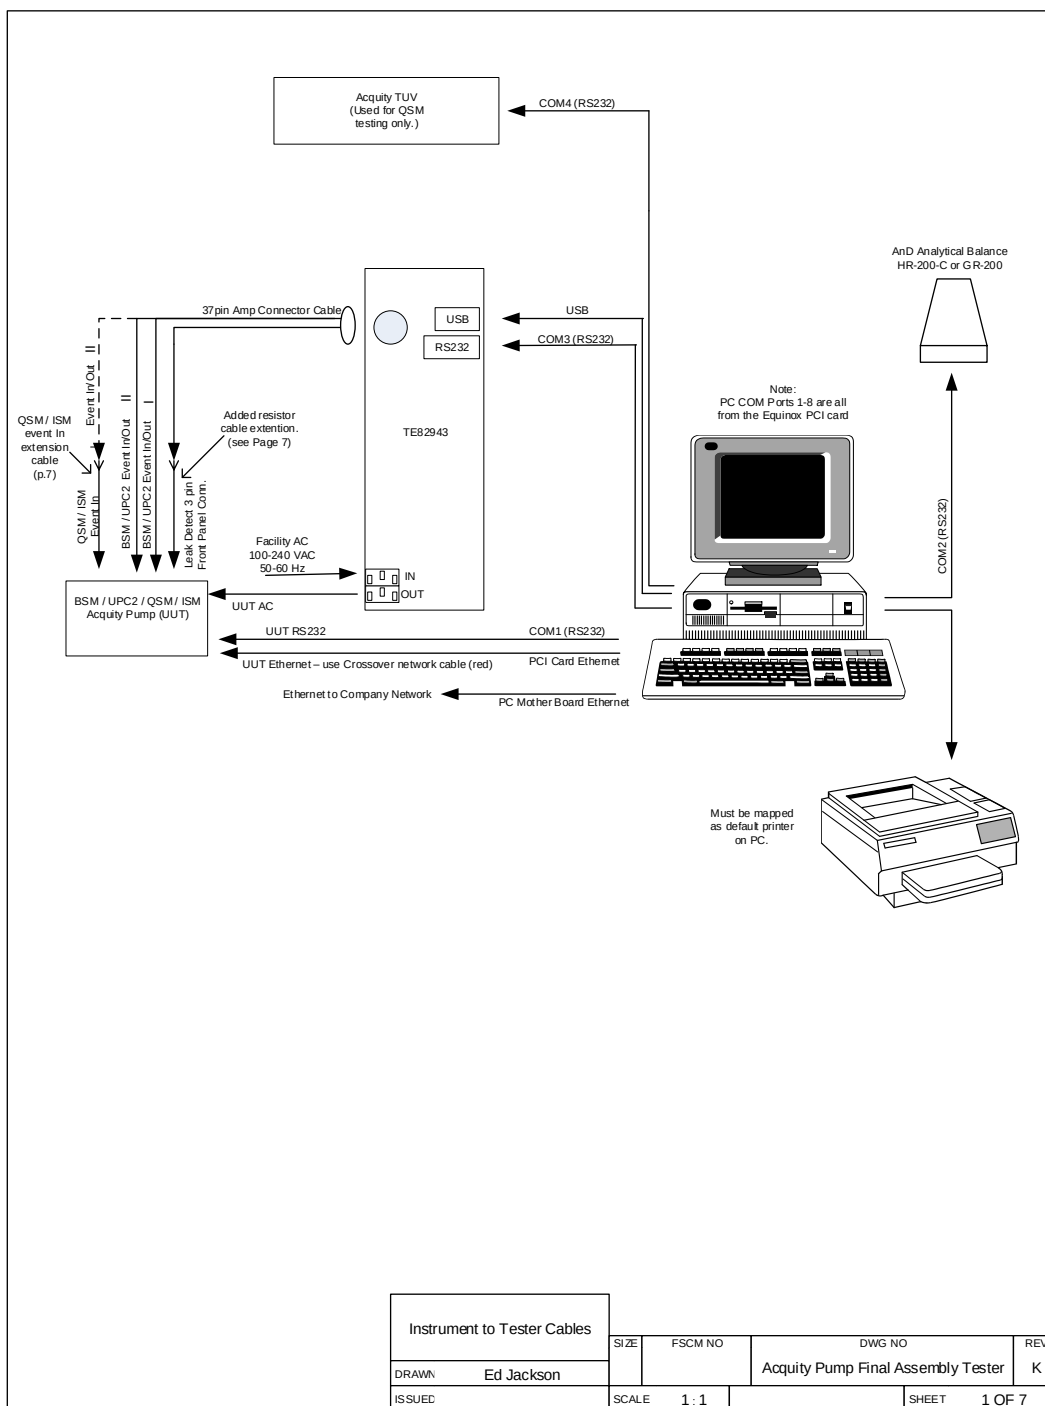

Electrical Connections

XI. Appendix 2

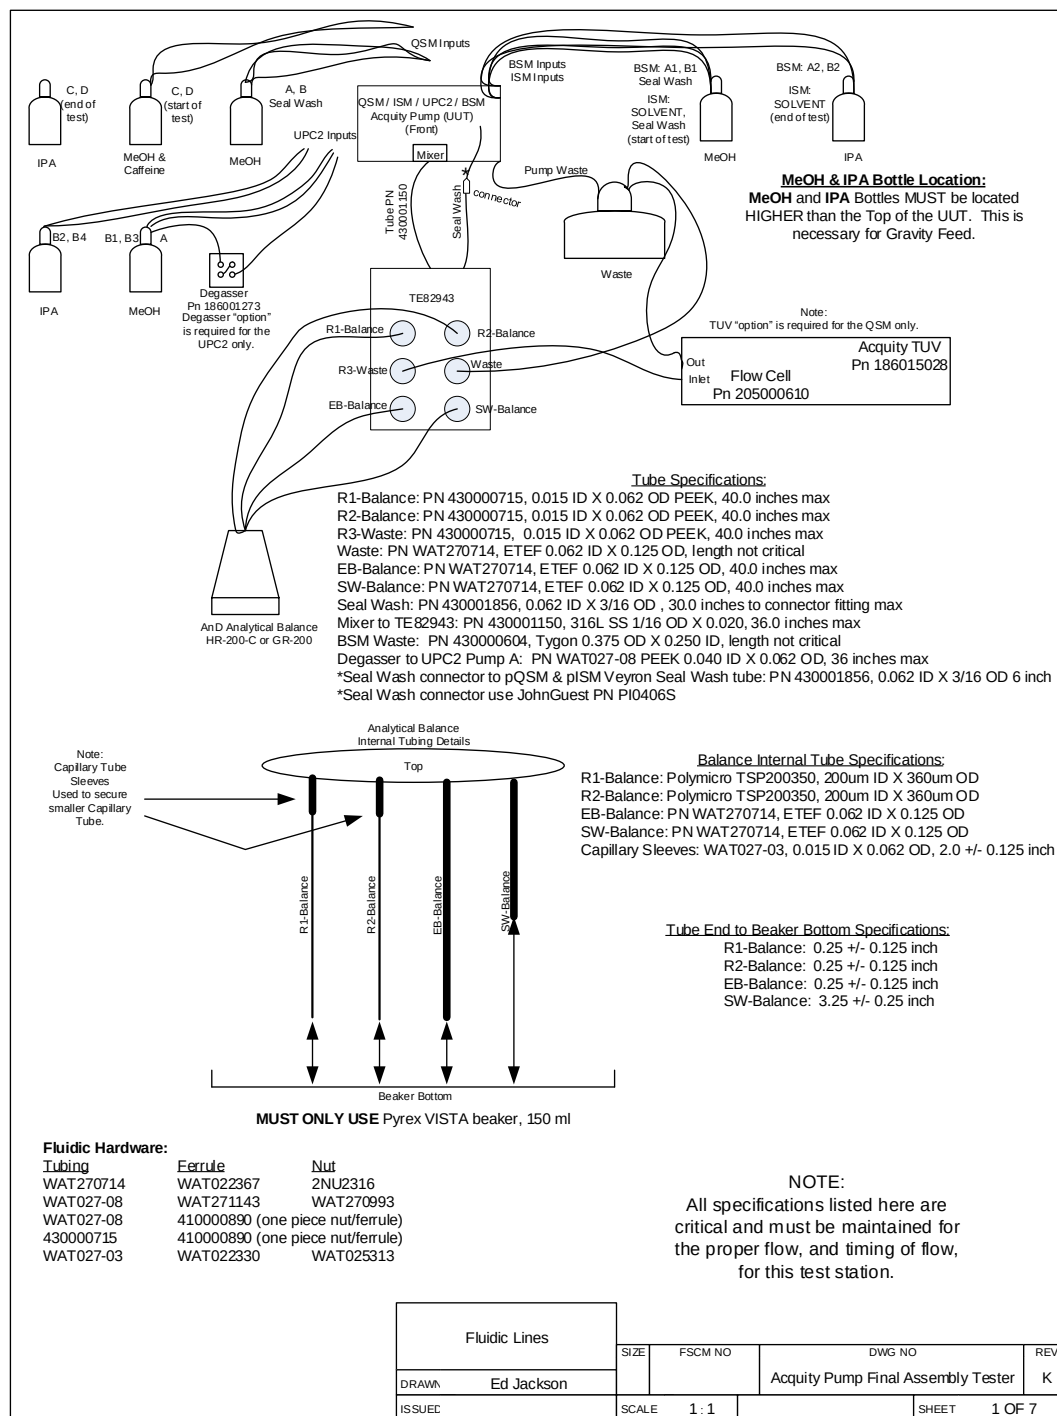

Fluidic Connections